




SUV Headrest Dog Guard

Fitting Instructions

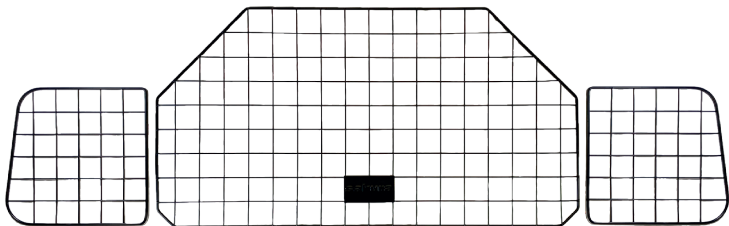


Please read these fitting instructions carefully before use and keep them for future reference.

- Fitting is quick and easy with no tools required.
- Suitable for any vehicle but specifically designed with SUVs and larger cars in mind.
- The SUV Dog Guard mounts securely to your headrests.
- Before assembling, please ensure that all parts are included in the package.

Product Number: SS5453


Contents

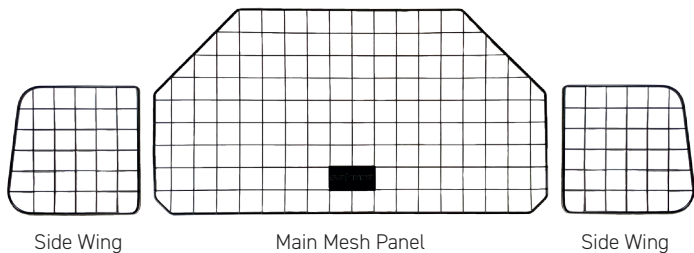

Fixing Bracket Type A



Fixing Bracket Type B

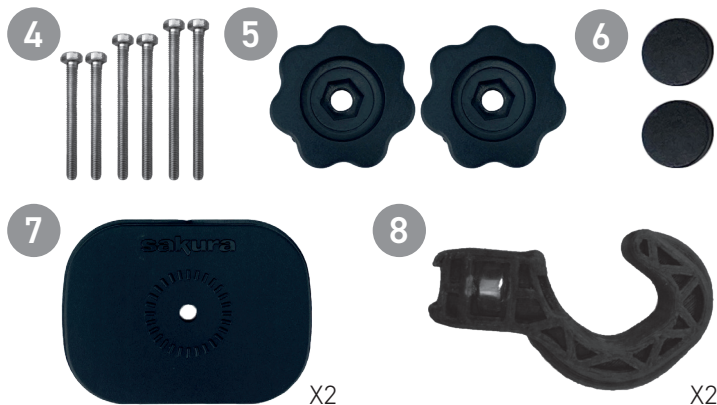


Fixing Bracket Type A:

- 1 Circular Clamp Fittings (x4)
- 2 Small Screws (x2)
- 3 Screw Head (x2)

Fixing Bracket Type B:

- 4 Screws (various lengths 2 x 50mm/2 x 60mm/2 x 70mm options)
- 5 Screw Heads (x2)
- 6 Screw Caps (x2)
- 7 SAKURA Pads (x2)
- 8 Headrest Hooks (x2)


Assembly

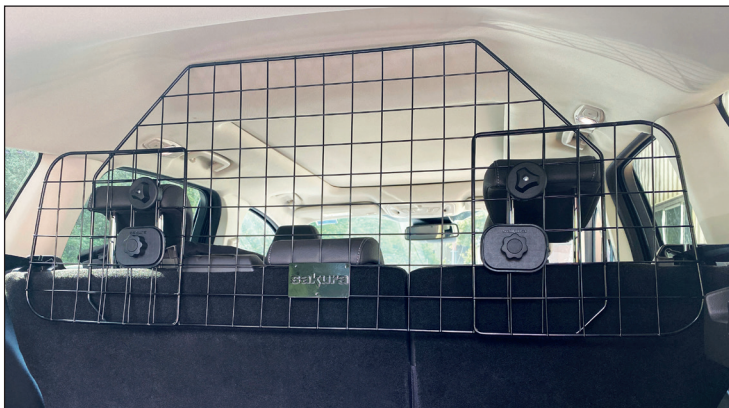

First check the available space in your car and then complete the main assembly on a flat surface before fitting in position.

Connect the Side Wings to the Main Mesh Panel. The SAKURA plate should be facing towards you. Diagram 1.

Diagram 1.

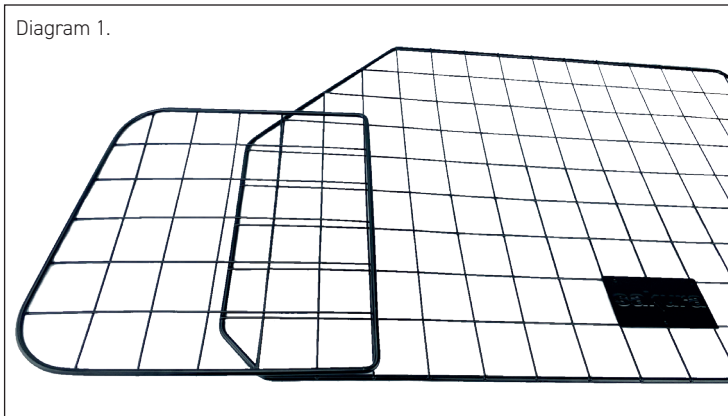

Construct Fixing Bracket Type A

Place one of the Circular Clamp Fittings ① to the underside of the Main Mesh Panel with the Side Wing on top in the required position. Thread one of the smallest screws ② through the underside of the mesh, through the Circular Clamp fitting, before placing the corresponding Clamp on top in position. See Diagram 2 and 3.

Diagram 2.



Diagram 3.



Use the Screw Head ③ to tighten the pieces together. Diagram 4.

Diagram 4.



Your panel should now appear as shown in diagrams 5 & 6 and be secure.

Once you have completed this process for both of the Side Wings you are now ready to fit the SUV Headrest Dog Guard into your car.

Diagram 5.

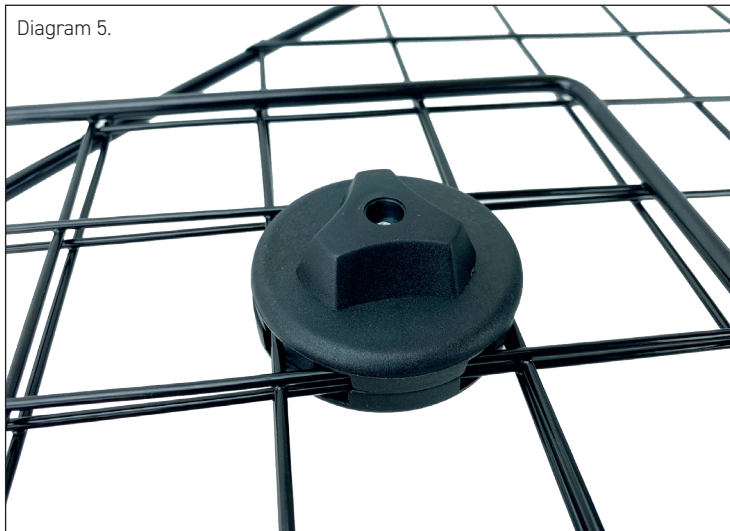


Diagram 6.


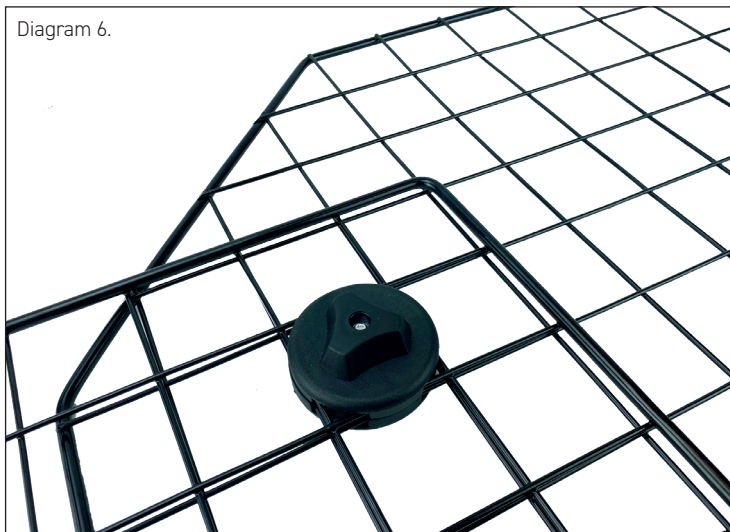


Diagram 7.

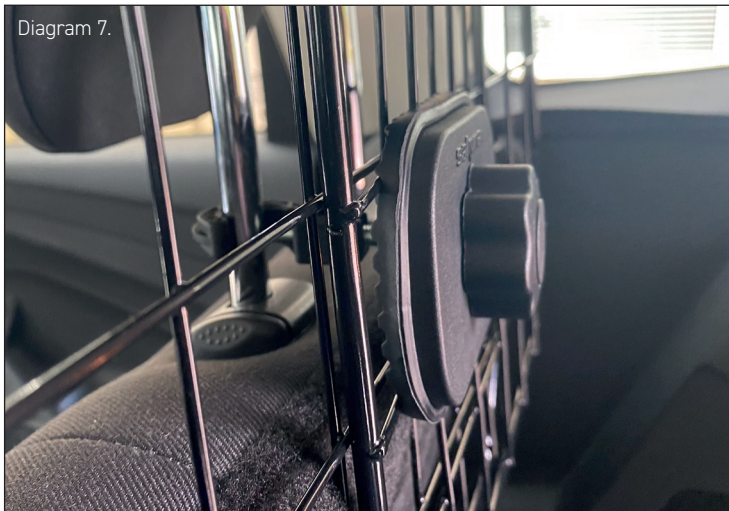


Prepare the Fixing Bracket Type B.

Diagram 7 displays how the bracket should be fixed to the headrests in your car.

To construct the Fixing Bracket Type B, first insert two medium sized Screws (60mm) ④ into the Screw Heads ⑤ before applying the Screw Head Cap ⑥ . See Diagram 8.

You can choose the appropriate screw length required to allow for a secure fitting. There are 3 screw size options available and after fitting you should have two remaining pairs leftover.

Diagram 8.

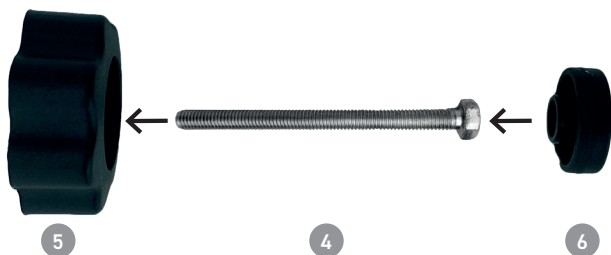

Push this assembly (parts 4 + 5 + 6) through the central hole in the SAKURA rubber pads 7 . See Diagram 9.



When both brackets have been constructed, position the Headrest in desired position. Place the Fixing Clamp to the Main Mesh and feed through so it aligns with the Headrest. Use the Headrest Hooks 8 , which will act like screws, to tighten appropriately. See Diagram 10 & 11.



Diagram 11.



Caution: Do not over tighten screw connectors, as this could damage the SUV Dog Guard and hook assembly.

If the 60mm screw is too long or short, use the 70mm or 50mm version. In the unlikely event the screws are not the correct length, standard M6 screws can be purchased from any DIY store. You should have two pairs of screws left over after assembly.

Warning

- Please follow instructions carefully to ensure the safety of you, your passengers and pets.
- When fitting a dog guard into a vehicle with rear air bags, please consult your vehicle manufacturer to ensure that it will not restrict rear air bag deployment in the unlikely event of an accident.

Whilst every effort has been made to ensure the safety of the SUV Dog Guard, Saxon does not accept liability or responsibility for any damage caused through negligence or failure to follow these instructions.

Made in China

Saxon

Everland Road, Hungerford,
Berkshire, RG17 0DX, UK
01488 689 400
info@saxon-brands.com
www.saxon-brands.com

SAKURA® is a registered trademark of
Saxon © 2020 by Saxon